


VENT HOOD DUCT COVER INSTALLATION INSTRUCTIONS

HARDWARE

FASTENER SIZE DESIGNATION:

Explanation:

M5x16 Screw
Metric screw
5 mm Shaft Diameter
16 mm Shaft Length

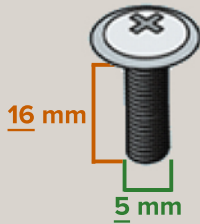

A: M5x16
Machine Screw



B: M4x8
Self-Tapping Screw




C: M5x35
Self-Tapping Screw




VENT HOOD DUCT COVER - VH36-2-DC & VH4272-2-DC

STEP 1: Fasten the **(A)** M5x16 Machine Screws into the duct cover from the underside of the vent hood, driving them upward into the duct cover.

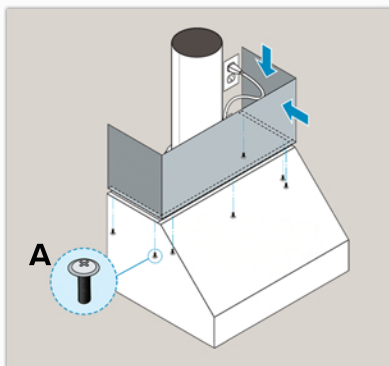

STEP 2: Finished.

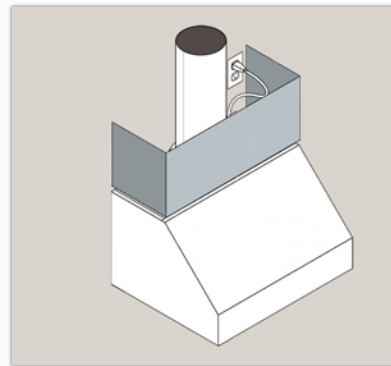


VENT HOOD DUCT COVER INSTALLATION INSTRUCTIONS

TELESCOPING DUCT COVER - VH36-2-DCT & VH4272-2-DCT


IMPORTANT

When installing or using the telescoping duct cover, **DO NOT USE** the 1/2" template bracket included with the vent hood. The vent hood must be installed without the 1/2" spacer bracket if a telescoping duct cover will be installed above it. Using the spacer bracket in this configuration may result in improper fitment or alignment of the duct cover.


STEP 1: Fasten the **(A)** M5x16 Machine Screws into the duct cover from the underside of the vent hood, driving them upward into the duct cover.

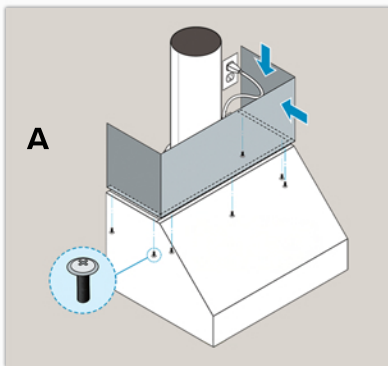

STEP 2: Install the mounting brackets using the **(C)** M5 × 35 self tapping screws

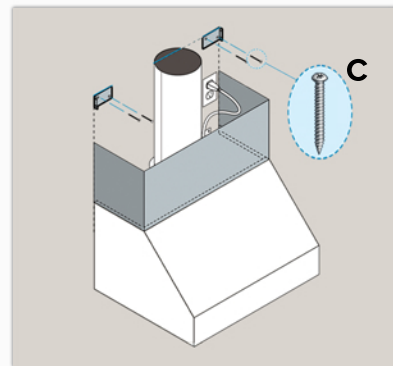

STEP 3: Fasten the **(B)** M4x8 Self-Tapping Screws to secure the duct cover to the bracket. Extend the telescoping duct cover until it sits flush with the ceiling.

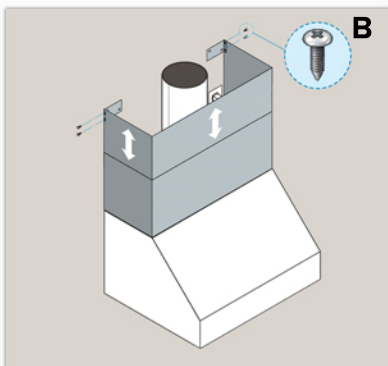

STEP 4: Finished.

